



Power Recliner with Power Headrest  
3900-50H in Leather



Power Recliner with Power Headrest  
3900-50H in Leather



Power Recliner with Power Headrest  
3900-50H in Leather

FLEXSTEEL®

© Flexsteel Industries, Inc. | Last Updated 09/25/2023

53  
51M  
51H  
51  
50M  
50H  
50

FEATURES

●

Flexsteel Spring Unit

●

DualFlex

●

Back Construction

●

Attached

●

Seat Construction

●

Attached

●

Seat Cushion(s)

●

High-Density (HC)

● Standard

○ Optional

PRODUCT DIMENSIONS	OVERALL			SEAT			Arm Height	Open Depth	Wall Clearance
	Height	Width	Depth	Height	Width	Depth			
Swivel Gliding Recliner -53	40"	34"	40"	19"	22"	21"	24"	65"	13"
Power Rocking Recliner -51M	40"	34"	40"	19"	22"	21"	24"	65"	13"
Power Rocking Recliner with Power Headrest -51H	40"	34"	40"	19"	22"	21"	24"	65"	13"
Rocking Recliner -51	40"	34"	40"	19"	22"	21"	24"	65"	13"
Power Recliner -50M	40"	34"	40"	19"	22"	21"	24"	65"	5"
Power Recliner with Power Headrest -50H	40"	34"	40"	19"	22"	21"	24"	65"	5"
Recliner -50	40"	34"	40"	19"	22"	21"	24"	65"	5"

NOTES

A clean, transitional design

Padded, soft sloped track arms

Adjust the recline and headrest positions with the touch of a button

Charge electronic devices with the single USB-A port located in the power button

Sustainably sourced wood frame delivers exceptional durability

Contoured, high-density foam seat cushion provides lasting, everyday comfort and support

Upholstered in your choice of more than 50 durable leathers

Handcrafted in North America

Swivels a full 360 degrees and allows you to glide or recline from any swivel position

Gently glides when not reclined and has safety locks to prevent gliding when reclined

Adjust from an upright to a fully reclined position by pulling back on the side handle in the arm

Gently rocks when not reclined and has safety locks to prevent rocking when reclined

Adjust from an upright to a fully reclined position with the touch of a button

Charge electronic devices with the dual USB-A port located in the power button

The power control allows you to independently adjust the recline and headrest. A separate home button returns the headrest and footrest to their original positions with one touch.

A USB port is included on the power control for powering electronics.

Zero draw technology only uses power when the USB port is in use.

Lower the footrest by applying pressure to it in a downward motion. Lowering the footrest with the handle can damage the recliner.

Power allows you to smoothly recline to any position.

A single USB port is included on each power button control on styles with arms.

